

## Package Contents

- 2 Tennis Rackets
- 2 Remote Cradles



**dreamGEAR**  
www.dreamgear.net

## SET-UP INSTRUCTIONS:

1. To attach the Wii Remote cradle to the Tennis Racket extension, align the pegs located on top of the cradle with the slots located on the bottom of the Tennis Racket extension.
2. Slide the cradle into the Tennis Racket extension.
3. Turn the cradle clockwise and lock into place.
4. Place the Wii Remotes into the cradle.
5. To detach the Wii Remote cradle from the Tennis Racket extension, slide down the latch located on top of the Wii Remote cradle, turn the cradle counter-clockwise and remove.

**Note:** Always practice safety first. Make sure the Wii Remote cradle is **attached properly and securely** to the Tennis Racket extension. Be aware of your surroundings and stay a safe distance from all objects. Don't ever swing your Tennis Rackets at anyone or anything.

**DISCLAIMER:** dreamGEAR is NOT liable for any direct, indirect, punitive, incidental, special, consequential damages, or any damages whatsoever arising out of or connected with the use or misuse of this Product.

**Note:** Some games require you to make selections using the infrared feature of the Wii Remote. When making selections with the Wii Remote using infrared, remove the Wii Remote from the Tennis Racket extension, make your selection and then place the Wii Remote back into the extension.